



## Transmitter Datasheet

**HT-G20** 

## **Description**

As part of Hoymiles Rapid Shutdown solution, Hoymiles Transmitter HT-G20 works with HRSD for module-level rapid shutdown.

When powered on, the HT-G20 uses PLC technology to continuously send a "permission to operate" signal to HRSD, enabling the PV system to start producing power.

In case of emergency, the PV system would enter module-level rapid shutdown mode by simply disconnecting the AC power of the Transmitter or using an external initiator.\*

\* Refer to the user manual for details.

## **Features**



Achieves rapid shutdown through Transmitter power-off or external initiation

Advanced crosstalk prevention solution







## **Technical Specifications**

Model	HT-G20											
Electrical												
Transmitter input voltage	12 V DC (+/-2%)											
Transmitter input current	0.06 A											
Communication												
Communication type	PLC											
Max. cable length between inverter input (+) and input (-)	800 m (2624.67 ft.)											
Core												
Number of Core connected	1			1			2			2		
Max. allowable current per Core	75 A			150 A			150 A			250 A		
DC cable diameter	Φ 6 mm (0.24")	Φ 6.45 mm (0.25")	Φ 7 mm (0.28")	Φ 6 mm (0.24")	Φ 6.45 mm (0.25")	Φ 7 mm (0.28")	Φ 6 mm (0.24")	Φ 6.45 mm (0.25")	Φ 7 mm (0.28")	Φ 6 mm (0.24")	Φ 6.45 mm (0.25")	Φ 7 mm (0.28")
Max. number of strings per Core*	5	4	3	15	12	10	15	12	10	20	18	16
Max. number of HRSD-1Cs per Core**	150	120	90	450	360	300	450	360	300	600	540	480
Max. number of HRSD-2Cs per Core**	75	60	45	225	180	150	225	180	150	300	270	240
Mechanical												
Dimensions	93 × 36.5 × 53 mm (3.66" × 1.44" × 2.09")											
Mounting type	DIN35 rail											
Environmental												
Operating temperature range	-40°C to +85°C (-40°F to +185°F)											
Outdoor rating	IP10 / NEMA1											
Compliance												
Safety	UL3741, UL1741, CSA C22.2 No. 330-17											
EMC	FCC Part 15B, ICES-003											

The maximum number of strings per Core is determined by the DC cable current and diameter. The total cable current should not exceed the Core's maximum allowable current, and the total cable diameter should not exceed the Core's diameter.


When installed inside an inverter, the HT-G20 needs to be powered with the following power curve at least.


Voltage: 12 V DC (+/-2%) Power standby: 0.2 W Duty cycle: 16%


Max. power: 3 W


2000 1250 1000 250 20 0





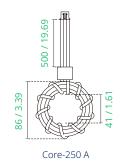





<sup>\*\*</sup> Max. number of HRSDs per Core = Max. number of strings per Core × number of PV modules per string (In the table we have assumed each string has 30 PV modules.)